


**SHINOLA**  
DETROIT


# LEATHER STRAP CHANGING GUIDE

## QUICK RELEASE SPRING BAR


1. From the backside of the watch, slide the tab over to release the pin, angle the strap and remove.

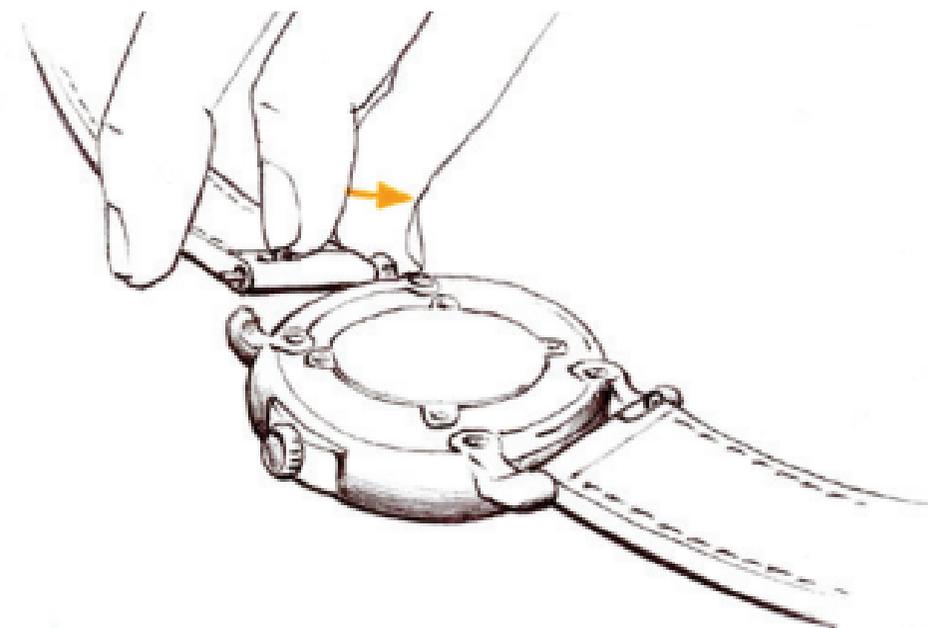


## STANDARD SPRING BAR - FORK TOOL

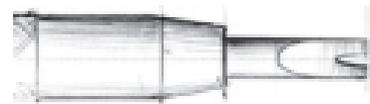


1. From the backside of the watch, insert forked end of tool between the edge of the strap and the lug/horn.
2. Engage spring bar end and push/pull back on it to release from the lug/horn.
3. Remove spring bar from end of strap, place in your new Shinola strap.
4. Insert one end into the hole on the inside of the lug/horn.
5. Use forked end of tool to hold back spring bar end while sliding the strap into position.
6. Release spring bar with tool and make sure the end inserts into the hole.

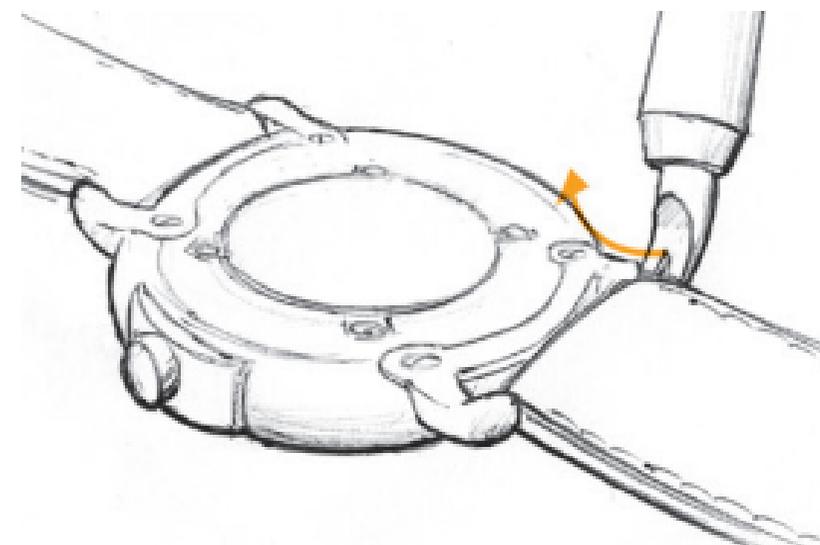

## SPRING BAR ACCESS OUTSIDE OF LUG/HORN - POINTED TOOL

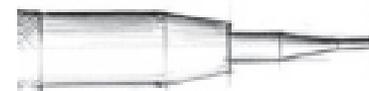

1. With the pointed tip of the tool, depress the spring bar end from the outside of the lug/horn.
2. Pull up on the end of the strap where it connects until it releases.
3. Replace spring bar in your new Shinola strap.
4. Insert one end of the spring bar into the hole on the inside of the lug/horn.
5. Depress spring bar with tip of fingernail or fork end of spring bar tool and insert into opposite side of lug/horn.
6. Confirm attachment.

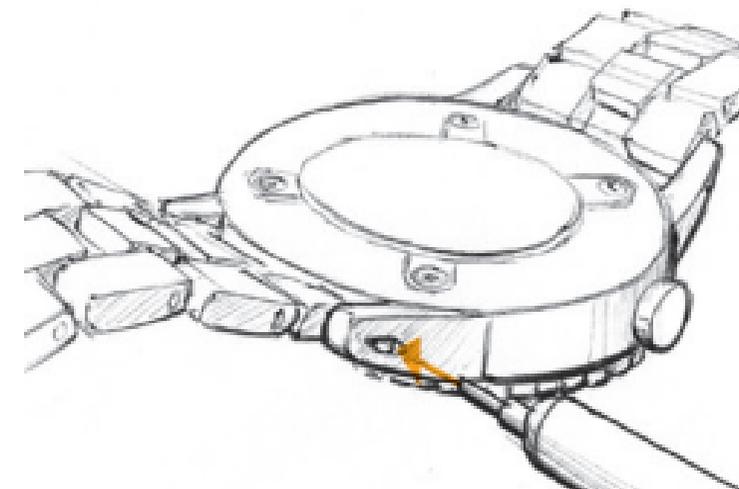

## STRAP CHANGE WITH PHILLIPS & STRAIGHT SCREWDRIVER

1. Place small piece of scotch tape on outside of lug/horn over screw hole to ensure safety against scratching if slipping occurs.
2. Insert tip of screwdriver through tape to engage screw head.
3. Some styles may require 2 screwdrivers to secure opposite end.
4. Unscrew, replace screws in your new Shinola strap, repeat process above.

